
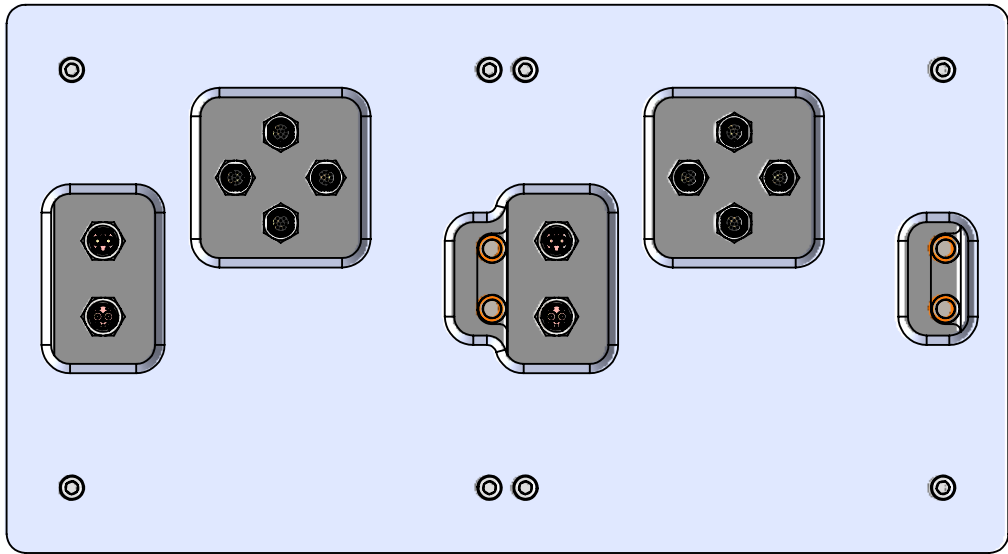



Option 1: Blind Dowel Holes

Note: This installation guide is applicable for all flyway models

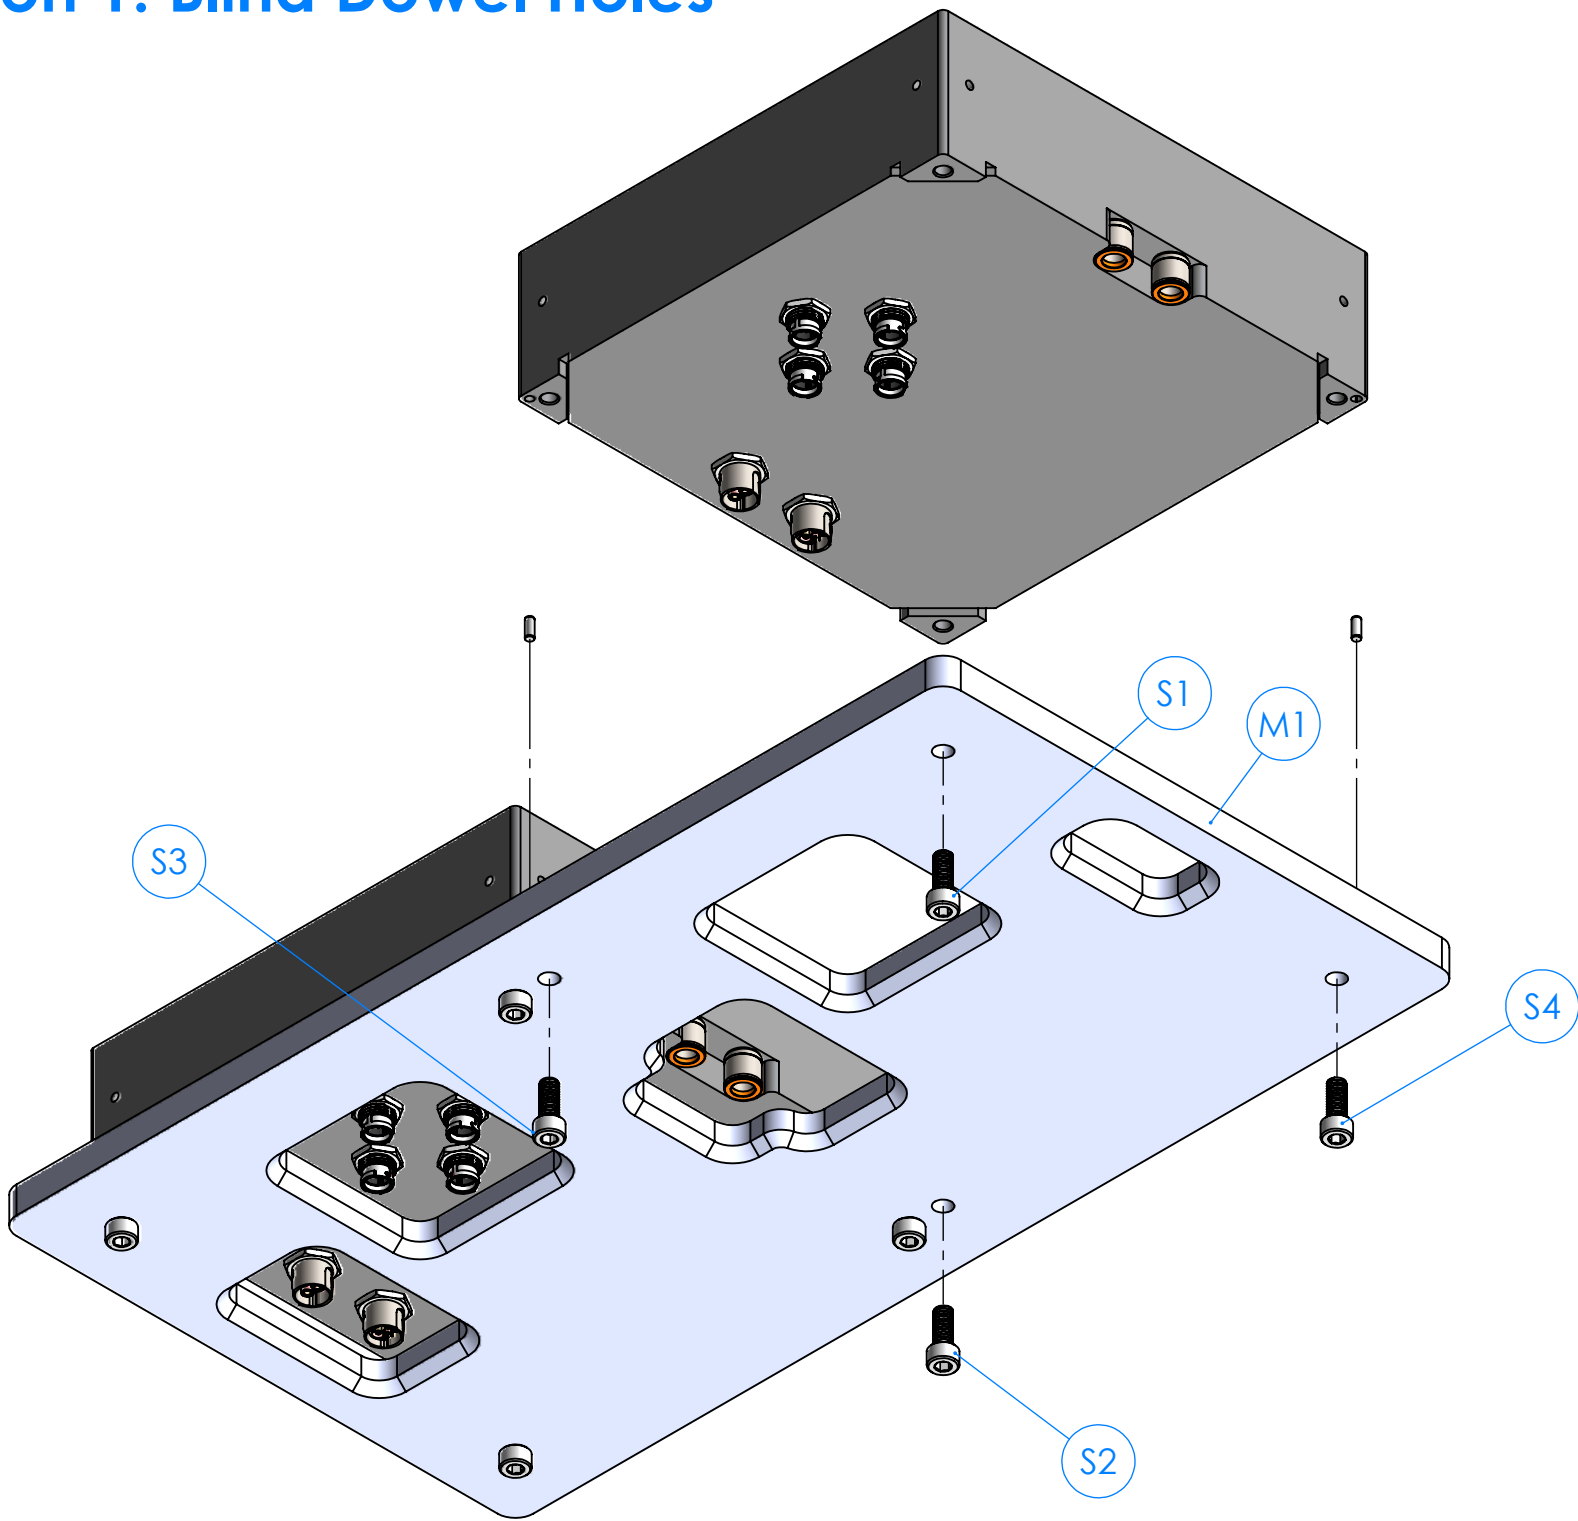



- Step 1: Insert 2 x 4mm Dowel Pins (P1 & P2)
Step 2: Carefully Align and Lower Flyway onto Mounting Plate (M1)
Step 3: Install 4 x M8 Screws (S1, S2, S3, S4)

Note: Recommended dowel length = dowel hole depth + 2mm

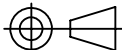
PRODUCT DRAWING		Dimensions and tolerances per ASME Y14.5M-1994 Surface texture per ANSI/ASME B46 1-1985				
		Product dimensions subject to change				
Model Mounting Plate Installation		Dwg. No. MPI			Rev. 0.0	
Planar Motor Incorporated - Vancouver, Canada						
Issue Date 2025/08/13	Projection 	Dimension mm	Size A3	Scale 1:1	Sheet 1/1	

Option 2: Through Dowel Holes

Note: This installation guide is applicable for all flyway models

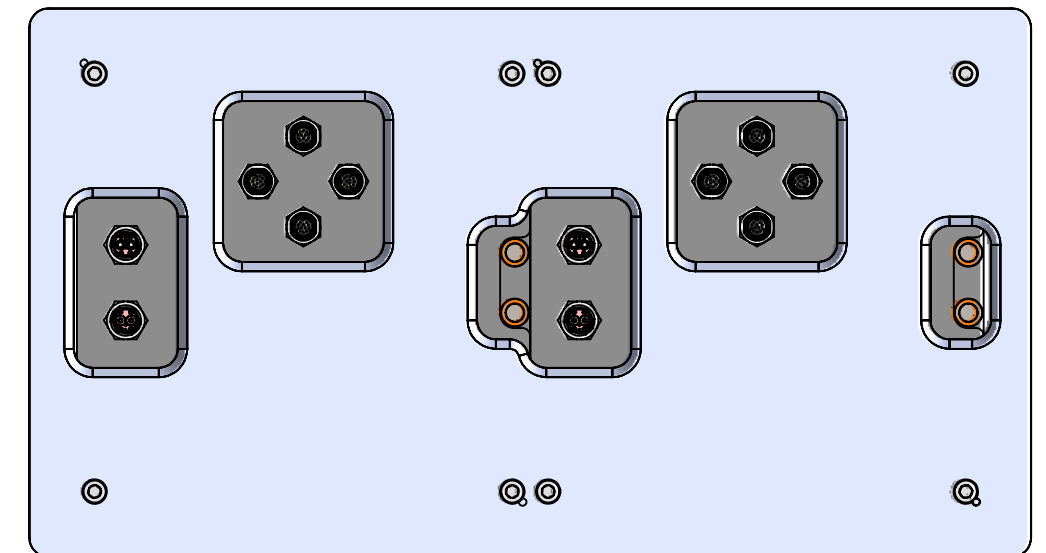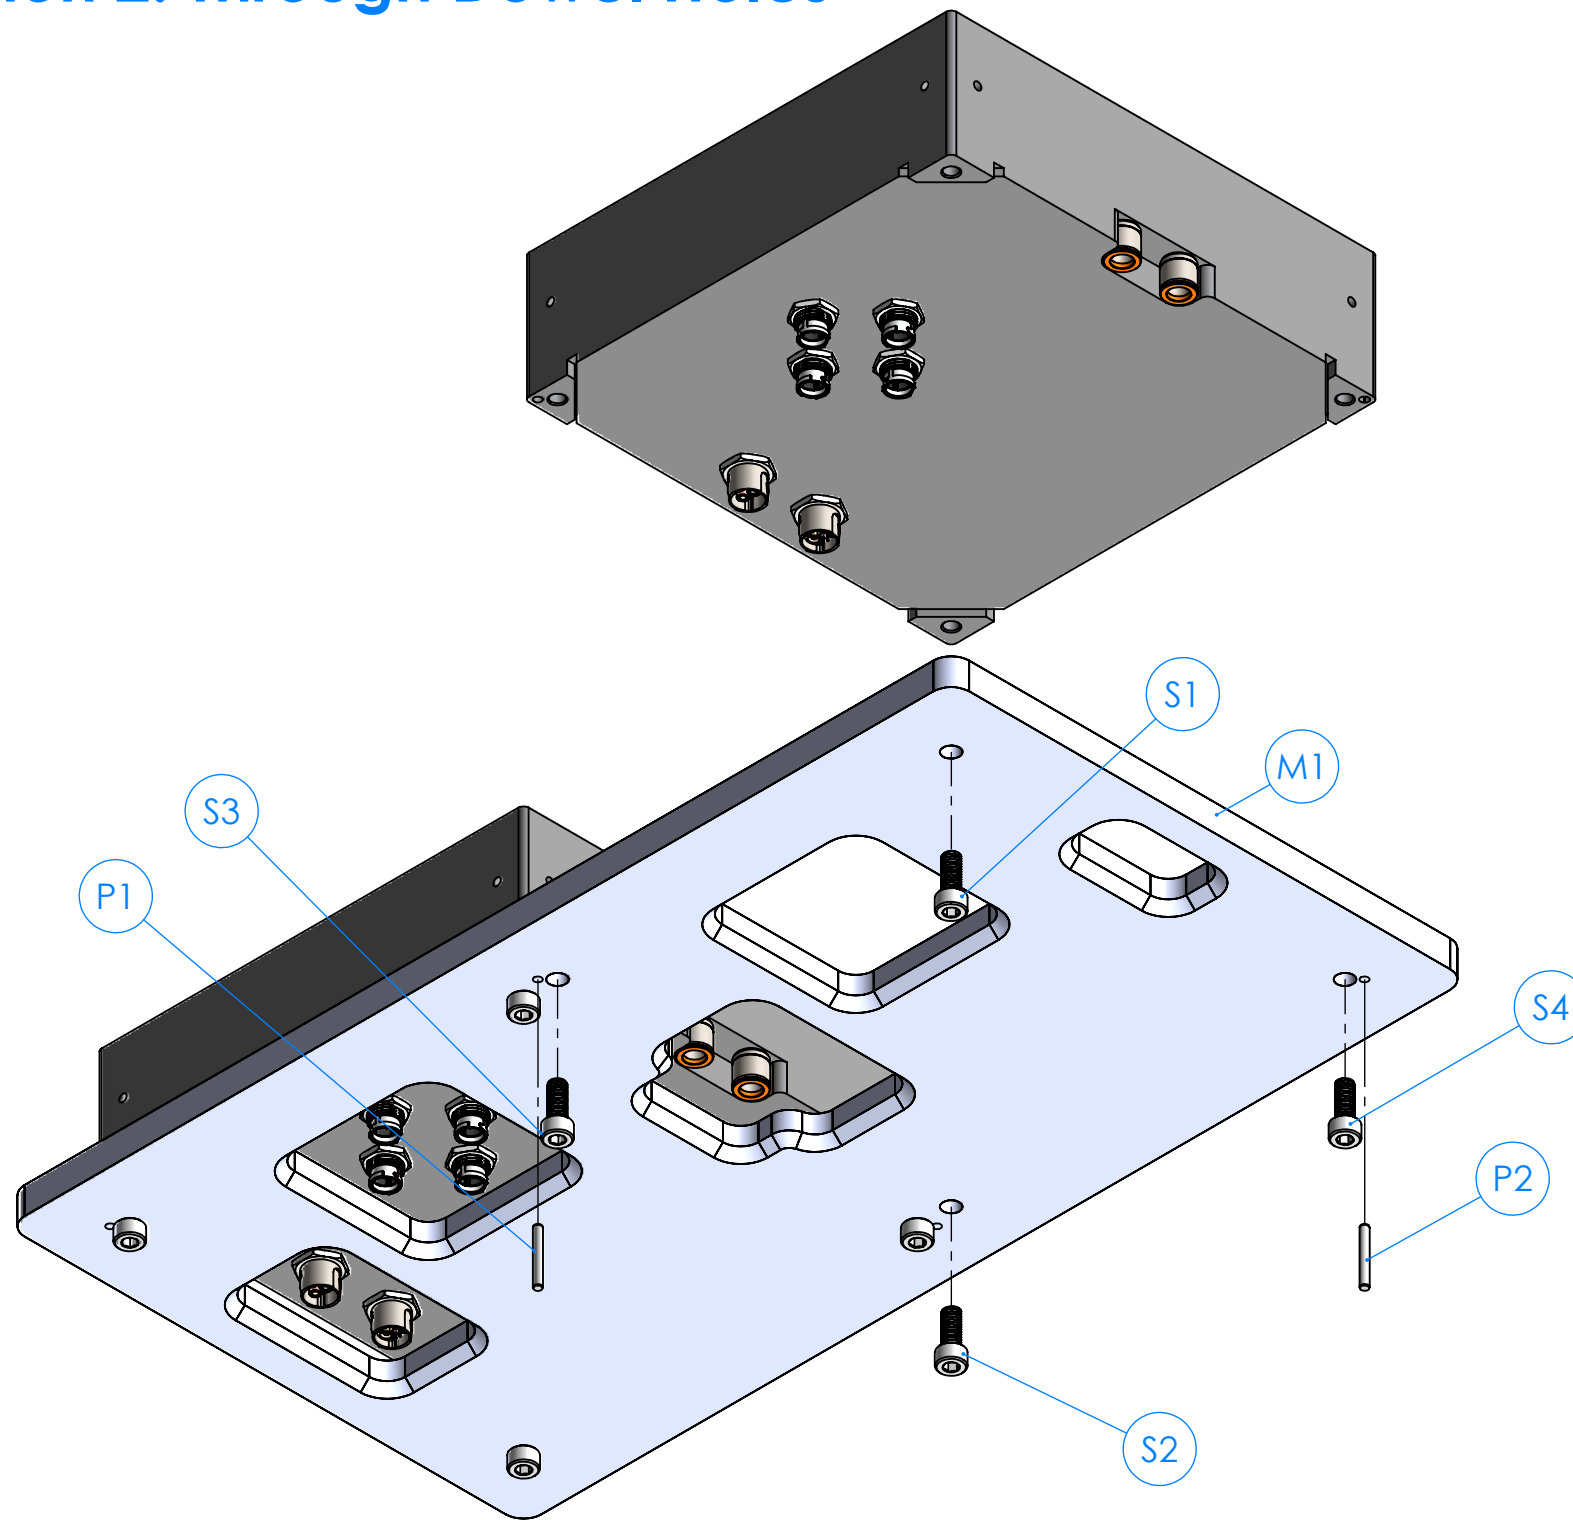

- Step 1: Carefully Align and Place Flyway onto Mounting Plate (M1)
- Step 2: Insert 2 x 4mm Dowel Pins (P1 & P2)
- Step 3: Install 2 x M8 Screws (S1 & S2)
- Step 4: Remove 2 x 4mm Dowel Pins (P1 & P2)
- Step 5: Install 2 x M8 Screws (S3 & S4)

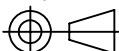PRODUCT DRAWING	Dimensions and tolerances per ASME Y14.5M-1994 Surface texture per ANSI/ASME B46 1-1985				
	Product dimensions subject to change				
Model Mounting Plate Installation	Dwg. No. MPI			Rev. 0.0	
Planar Motor Incorporated - Vancouver, Canada					
Issue Date 2025/08/13	Projection 	Dimension mm	Size A3	Scale 1:1	Sheet 1/1